

Care & Maintenance

General FAQ

Teak wood is an incredible material that allows for different looks and styles depending on how you maintain it if you choose to maintain it at all. DO NOT oil, stain, or wax your teak furniture. It is made to last long durations of time without needing to do any of these. We recommend storage of products that feature slings or wicker inside during winter. Any products that are all teak or a teak/metal hybrid can be left outside all year. As teak ages, it will naturally turn to the highly coveted gray color. Most stains can be easily removed quickly by simply spotting the stain location.



TC10 – Teak Cleaner

This cleaning solution helps restore teak wood to its original color. While its original gold color cannot quite be achieved after it is gone, this solution will turn the wood to a clean blond color.



TC20 – Teak Protector

Teak Protector will prevent the oxidation of teak wood by maintaining its original gold color. Apply once or twice a year depending on geographical conditions. If using Teak Cleaner, apply after.



TC30 – Teak Shield

Teak Shield helps protect teak tabletops from spills and stains, preventing unwanted materials from soaking into the wood as easily. Apply after Teak Cleaner and/or Teak Protector if applicable.



FB10 – Sling, Upholstery, & Fabric Cleaner

Fabric Cleaner is an easy-to-use salutation that removes dirt and stains from both cushions and sling chairs alike.



FB20 – Sling, Upholstery, & Fabric Protector

Fabric Protector helps prevent food and drink stains from seeping into cushion and sling fabric.



SS10 – Stainless Steel Cleaner

Stainless Steel Cleaner removes any rust, oxidation, or dirt that appears on stainless steel. Useful for both stainless steel products and maintaining hardware on teak products.



SS20 – Stainless Steel Protector

Stainless Steel Protector helps prevent stainless steel from rusting and oxidizing; maintaining the new sheen for a longer time. Recommended if within 10 miles of salt water.

